EVERGREEN

CH-180B

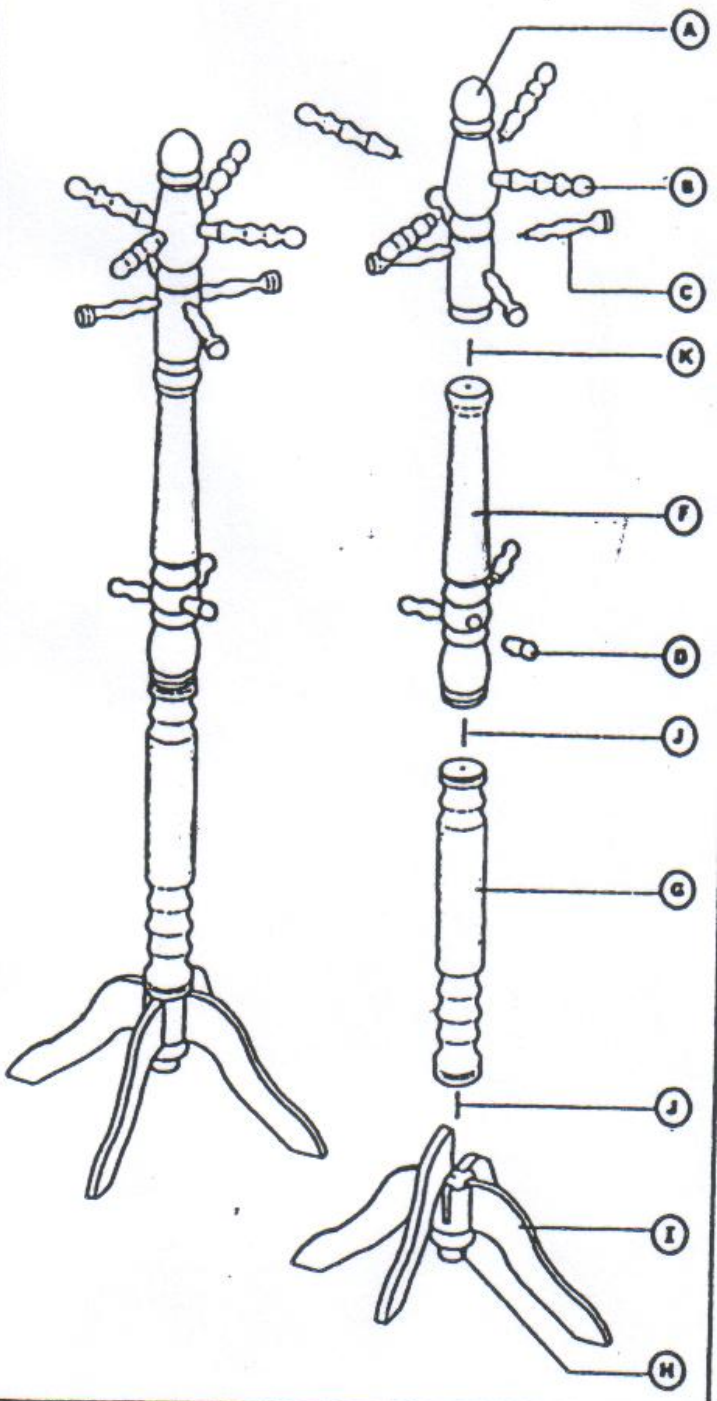

Dimension: 590mmW x 1830mmH
Material: Rubber Wood
Made In Malaysia

ASSEMBLY INSTRUCTION

1. Take 4 pcs. of (I) and insert to (H).
2. Fix the screw (J) to the hole in (H). Then align (G) to the screw.
3. Take another screw (J) fix to (G). Then align (F) to the screw.
4. Fix ion rod (K) into the hole in (F). Place (A) on the top of (F).
5. Fix (B) and (C) to (A).
6. Fix (D) to (F).

CAUTION!

Do not tighten screws until completely assembled.

PART LIST

(A) X 1		(H) X 1	
(B) X 4		(I) X 4	
(C) X 4		(J) X 2	
(D) X 3		(K) X 1	
(F) X 1			
(G) X 1			

INSTRUCTIONS D'ASSEMBLAGE CJ-273

LISTE DES PIÈCES

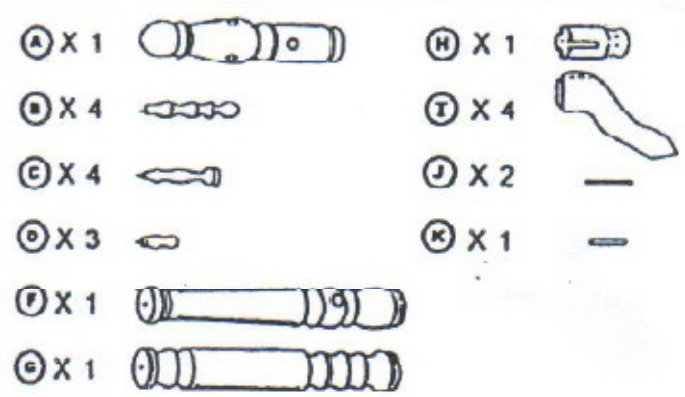

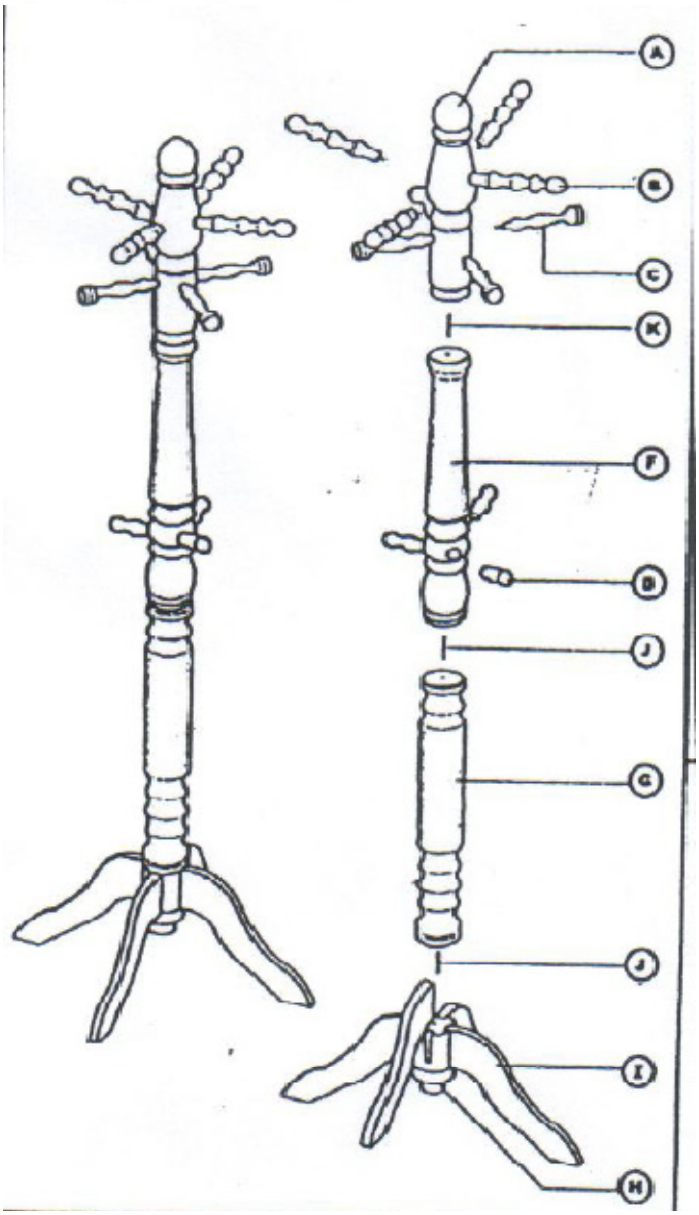

Dimension : 590 mm L x 1 830 mm H
Matériau : bois de caoutchouc
Fabriqué en : Malaisie

1. Prendre les 4 pièces (I) et joignez-les à la pièce (H)

2. Insérez une vis (J) dans l'orifice de la pièce (H).

Assurez-vous ensuite de bien aligner la pièce (G) à la vis.

3. Insérez une autre vis (J) dans à la pièce (G).

Assurez-vous ensuite de bien aligner la pièce (F) à la vis.

4. Fixez la tige ionique (K) dans l'orifice de la pièce (F).

Placez la pièce (A) sur le dessus de la pièce (F).

5. Fixez les pièces (B) et (C) à la pièce (A).

6. Fixez la pièce (D) à la pièce (F)

ATTENTION !

Ne serrez pas les vis avant d'avoir terminé l'assemblage.